




Montageanleitung Mounting Instruction Instructions de montage Istruzioni di montaggio

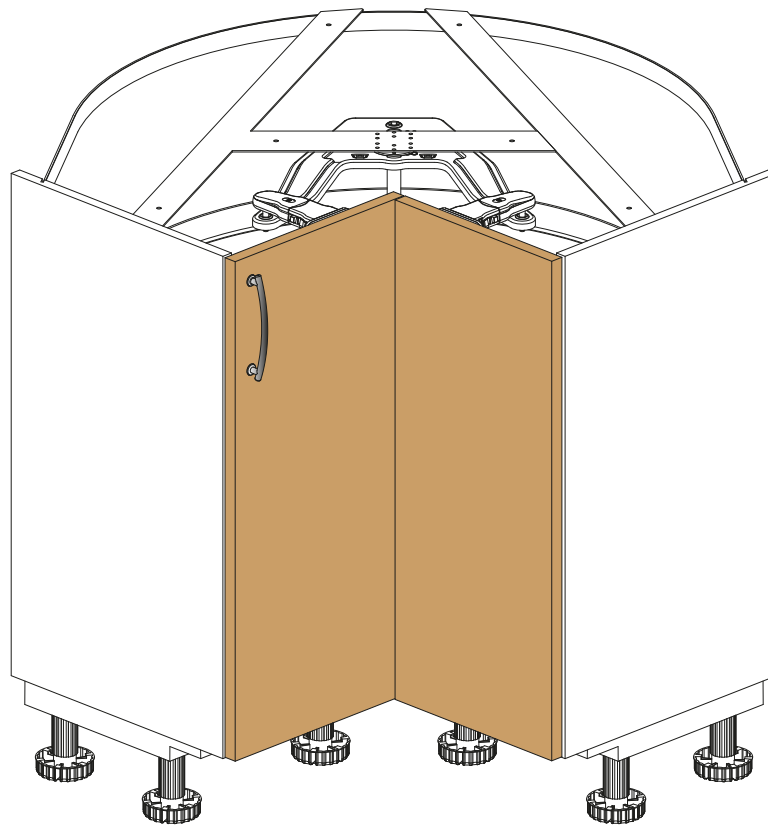


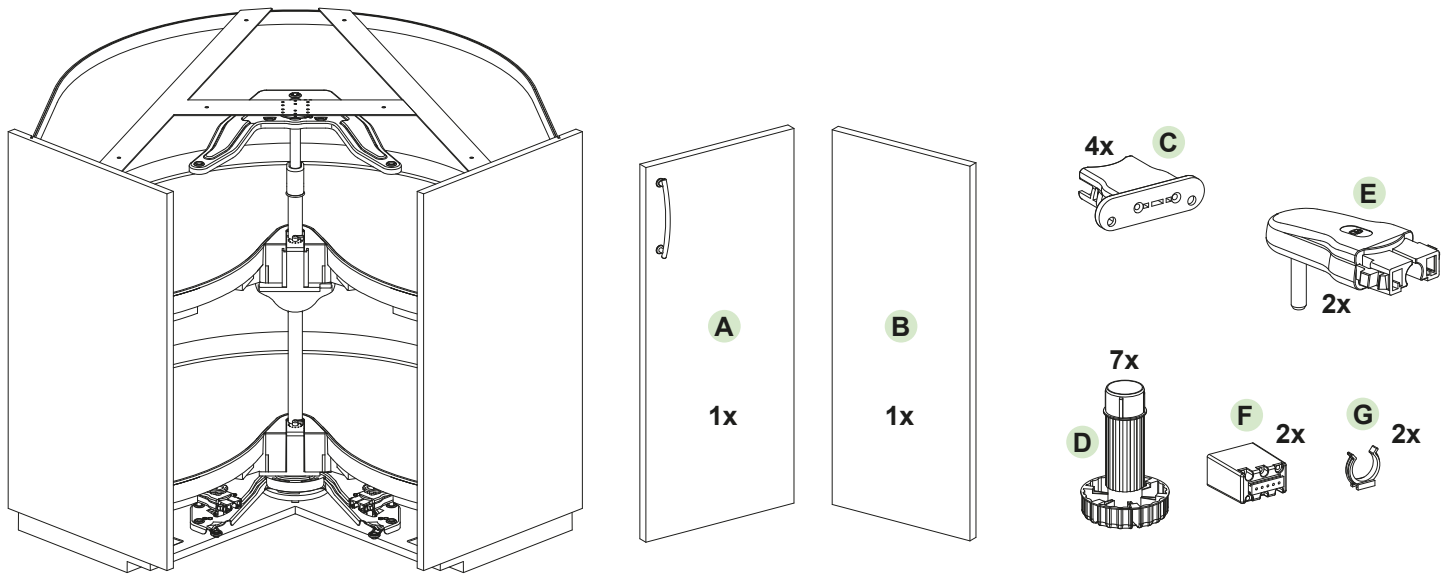



1

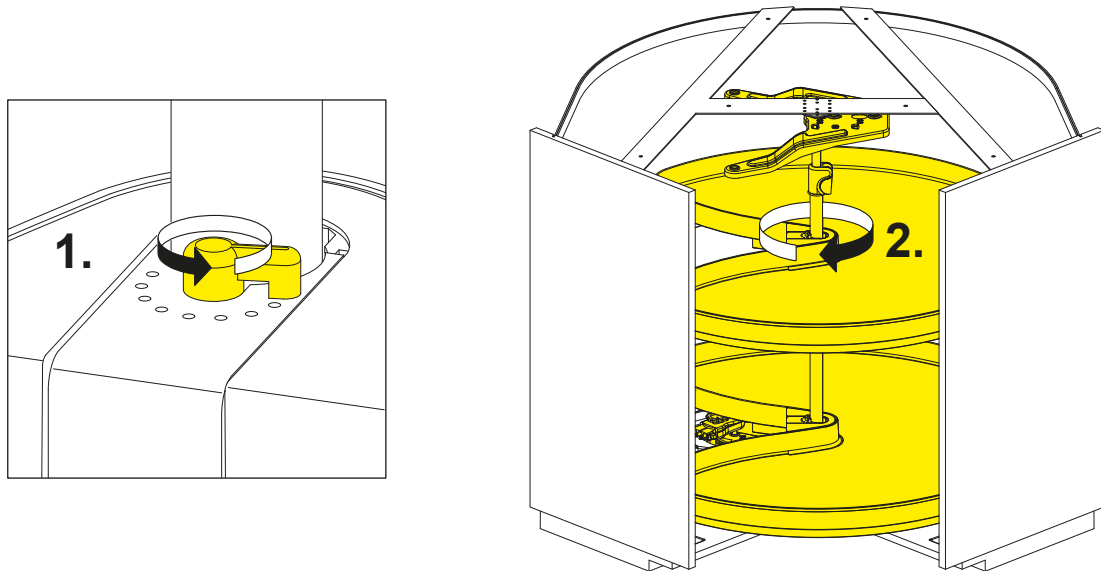



2

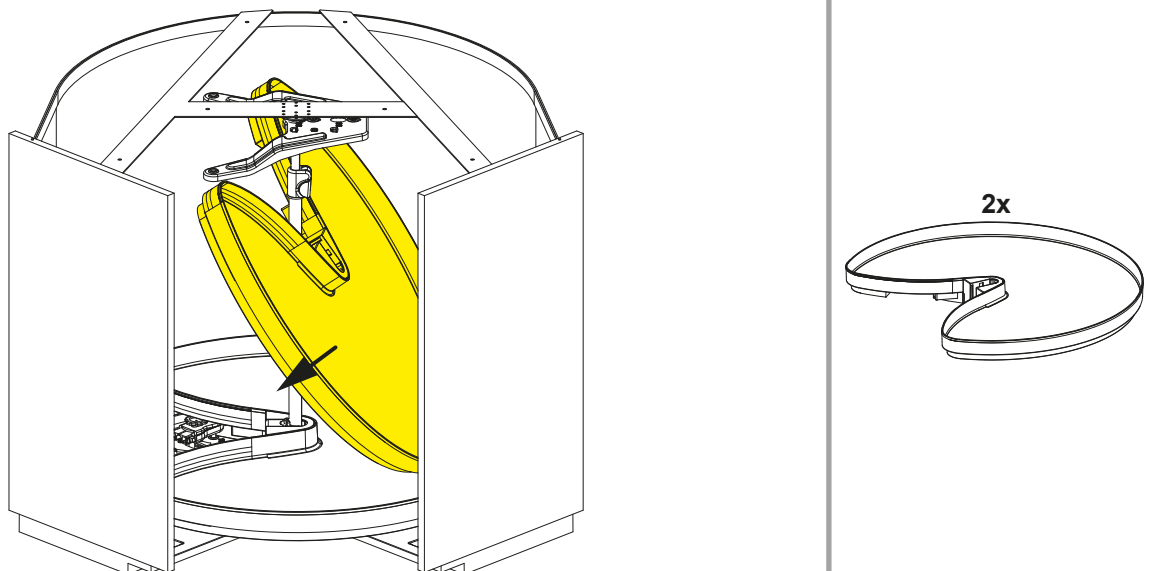





3

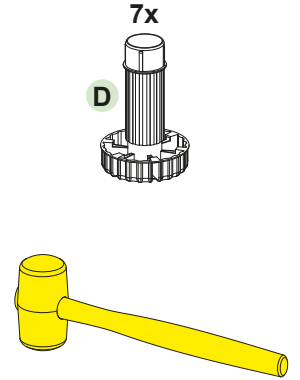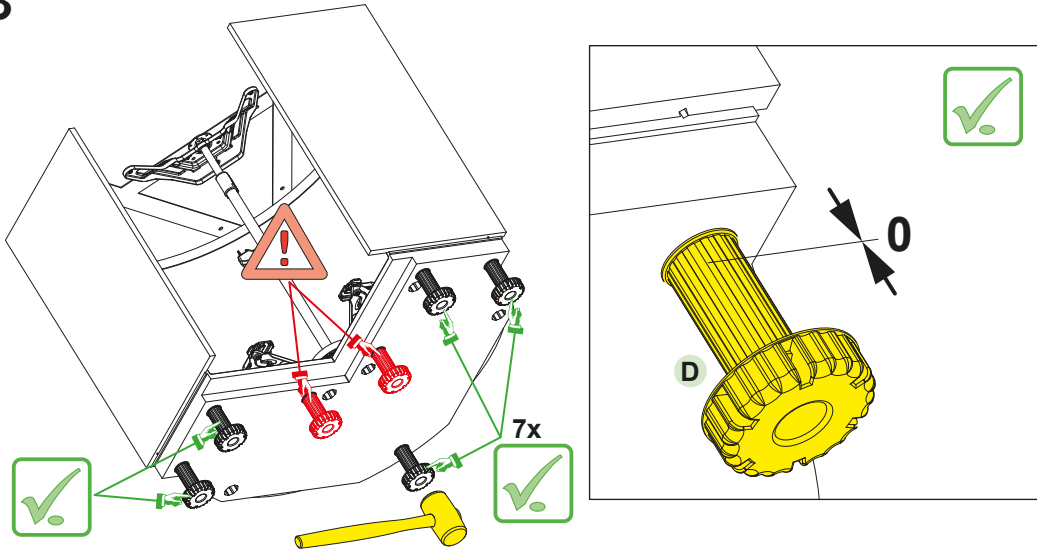




4

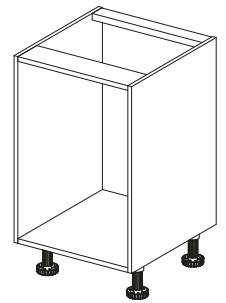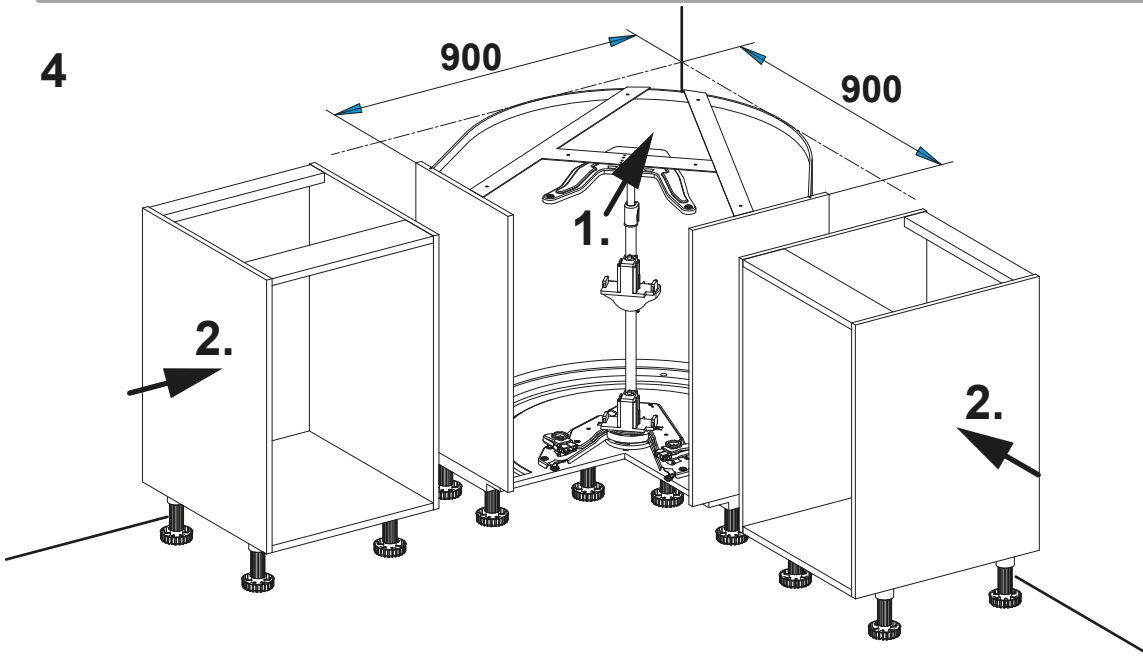






5

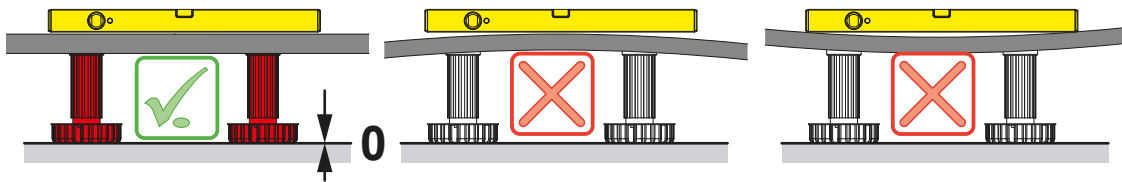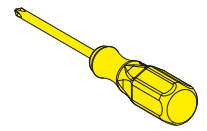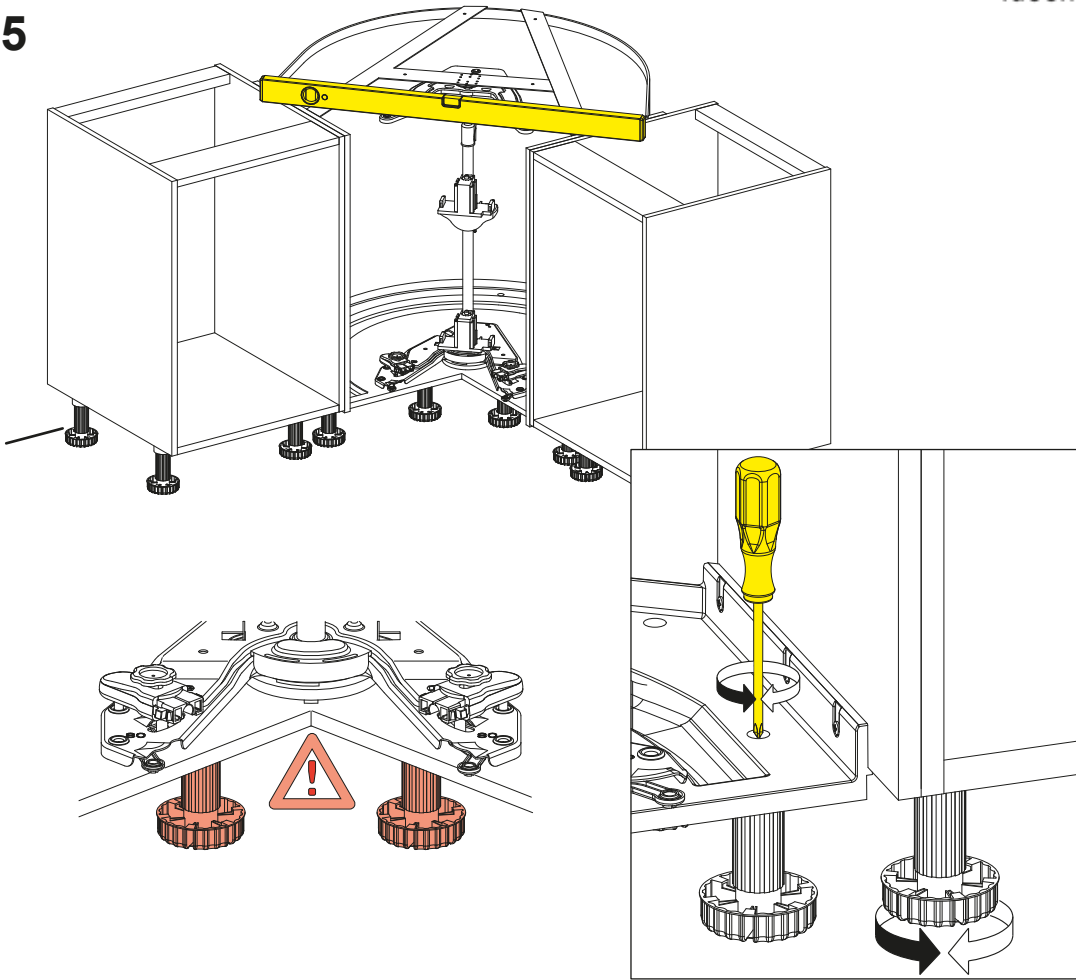



6

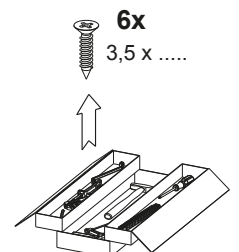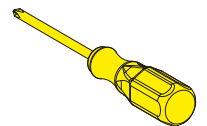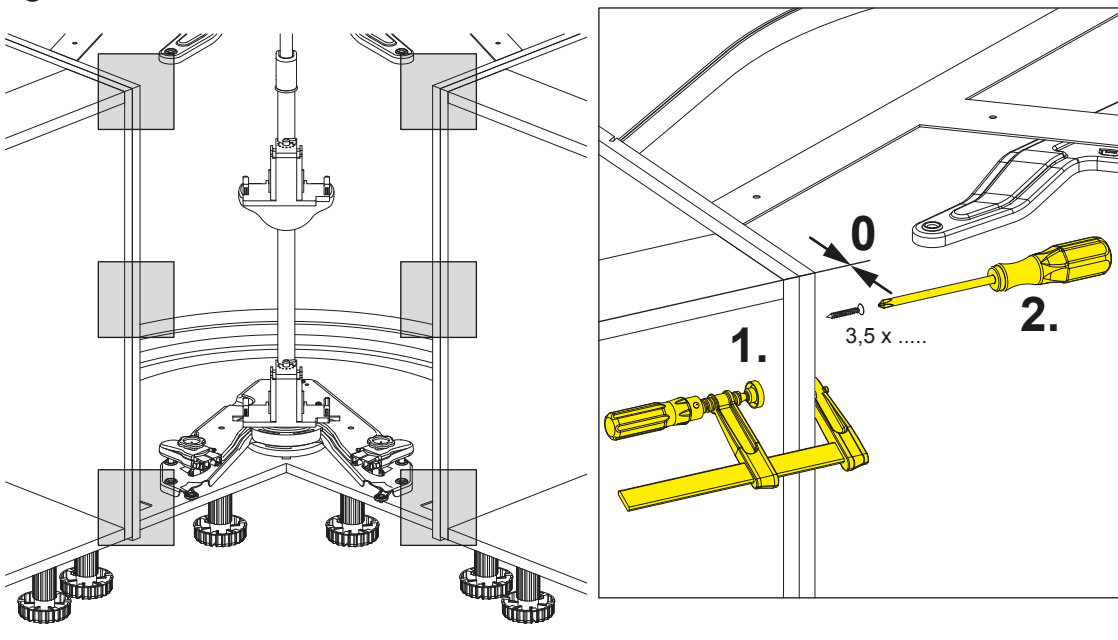


7

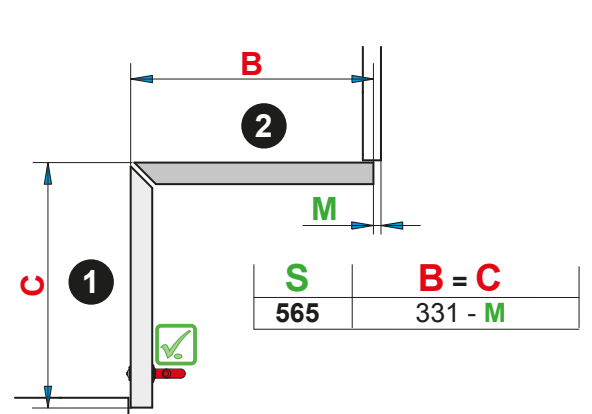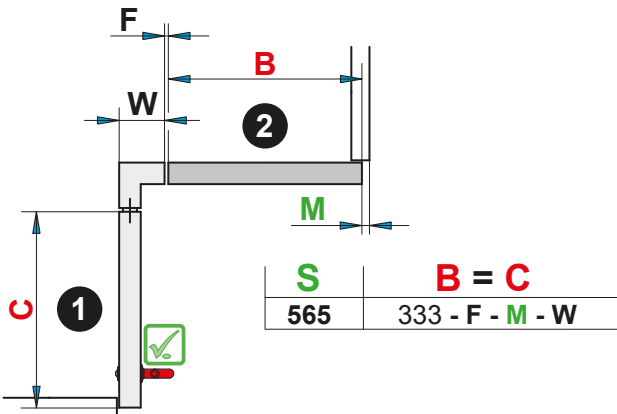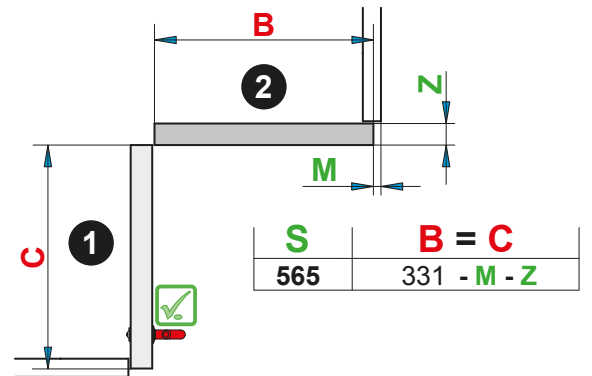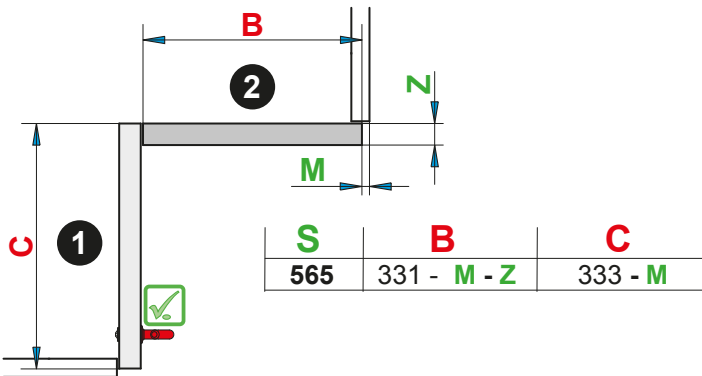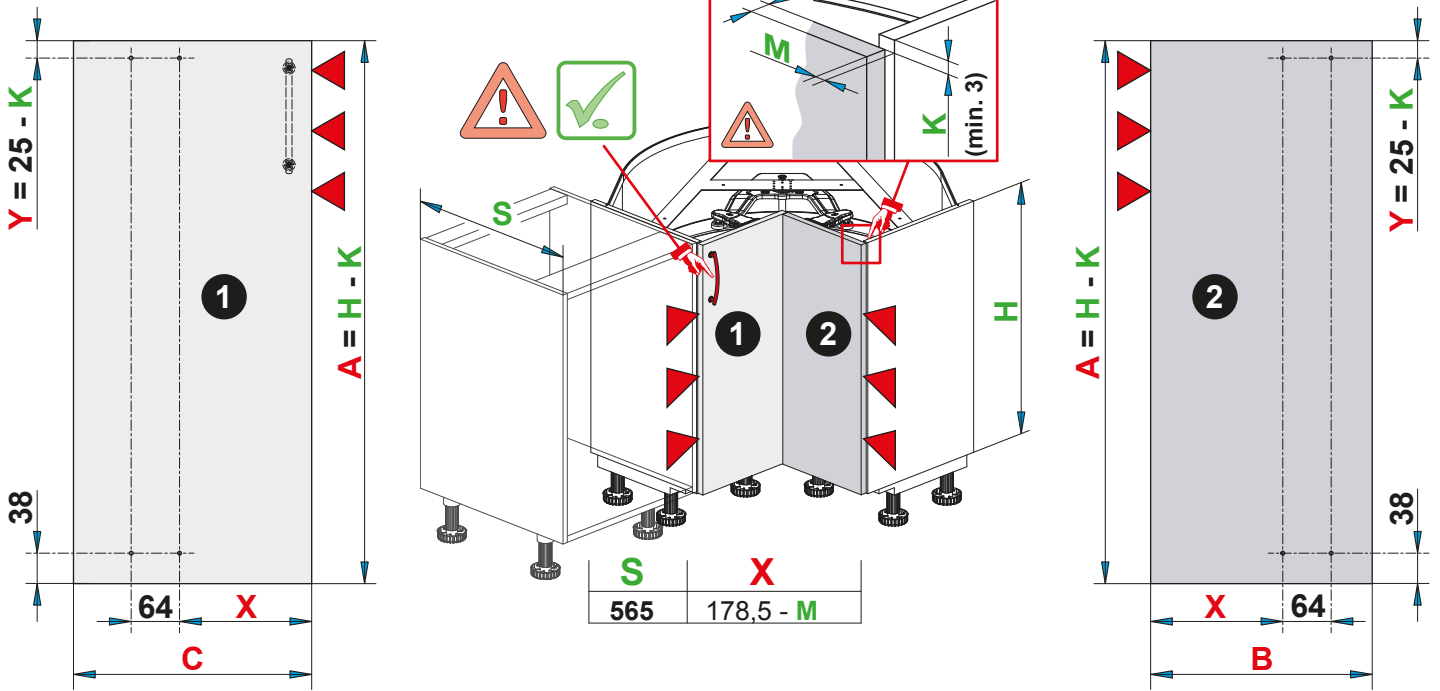






8

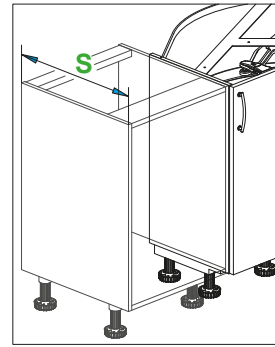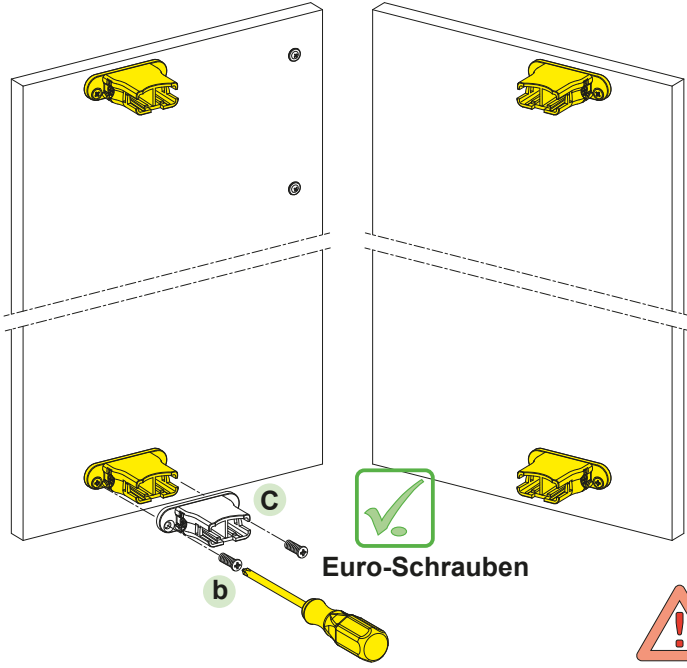











S		
550		✓
555		✓
560		✓
565		✓
570	X = 5	✓
575	X = 10	✓
580	X = 15	✓

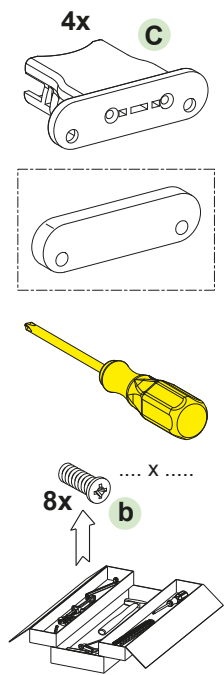


9

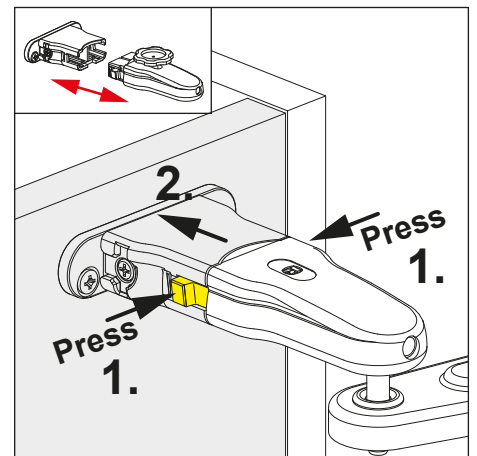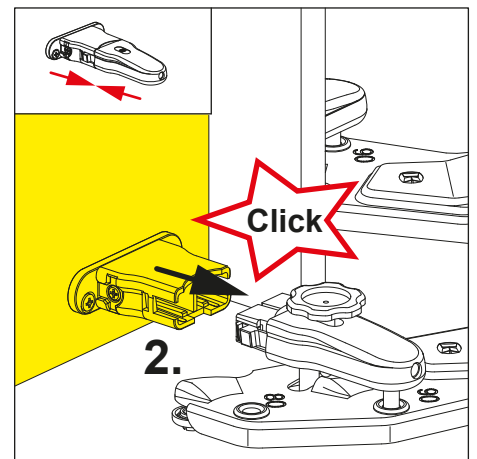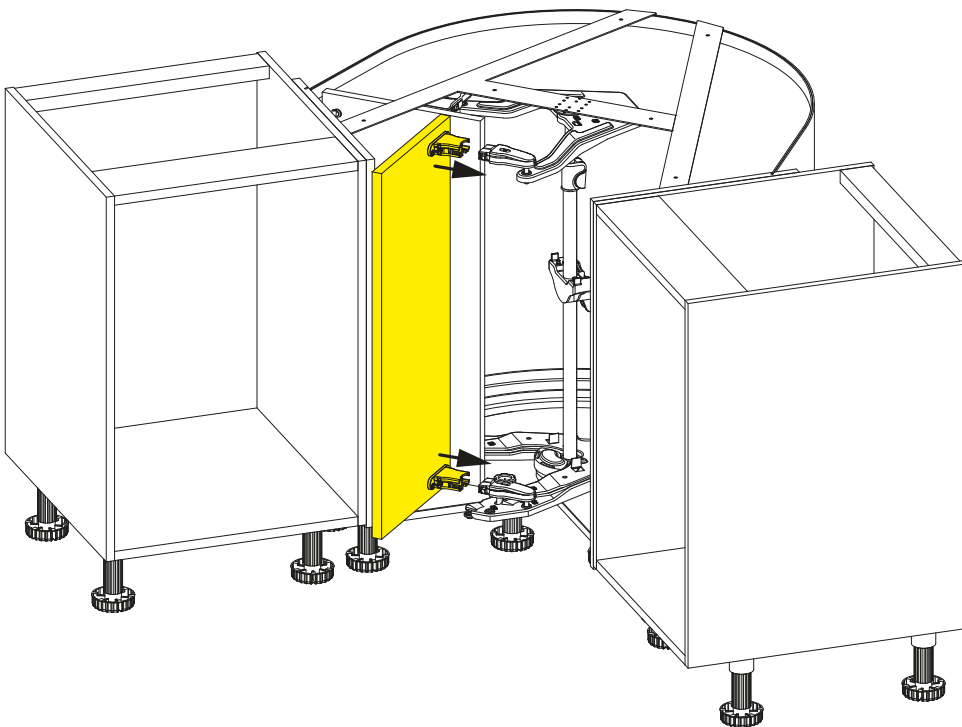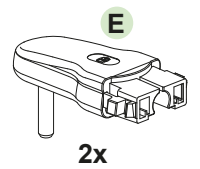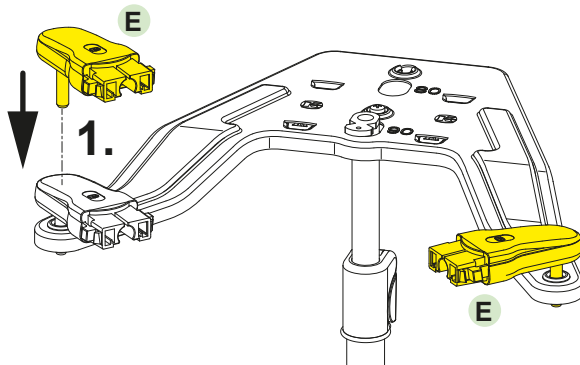



10

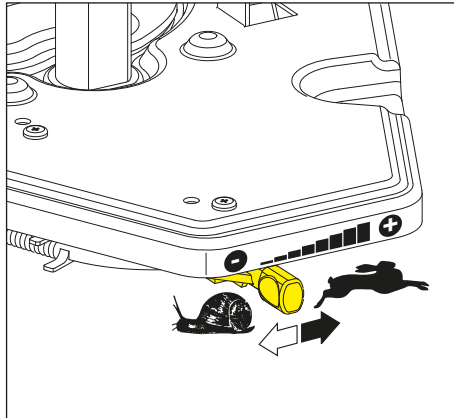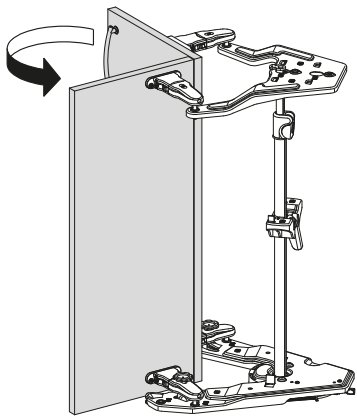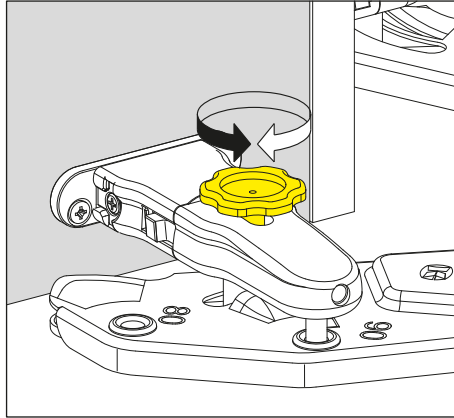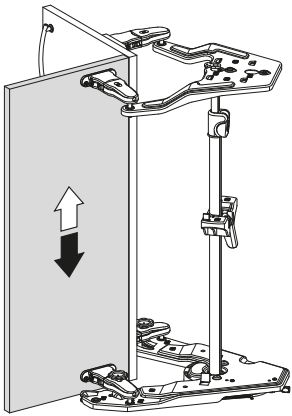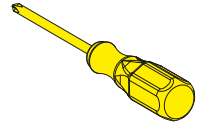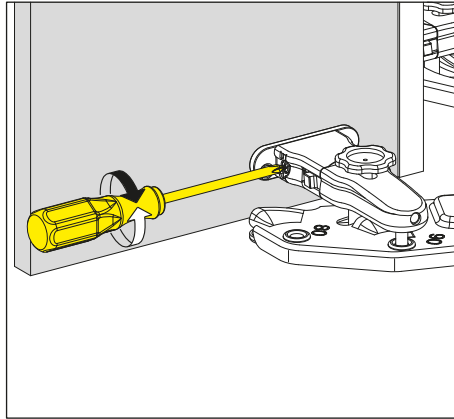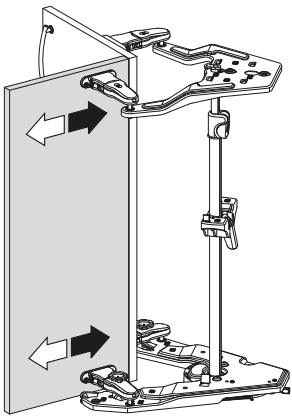
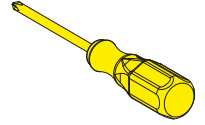
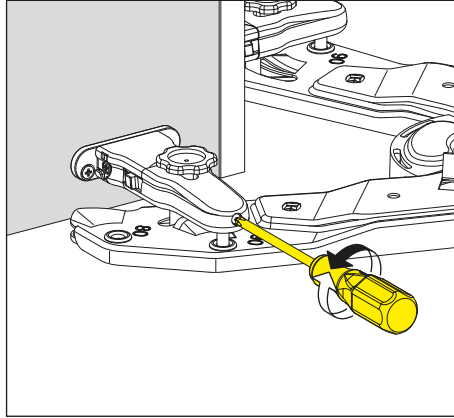
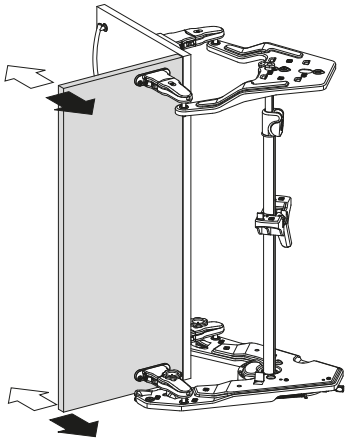


11


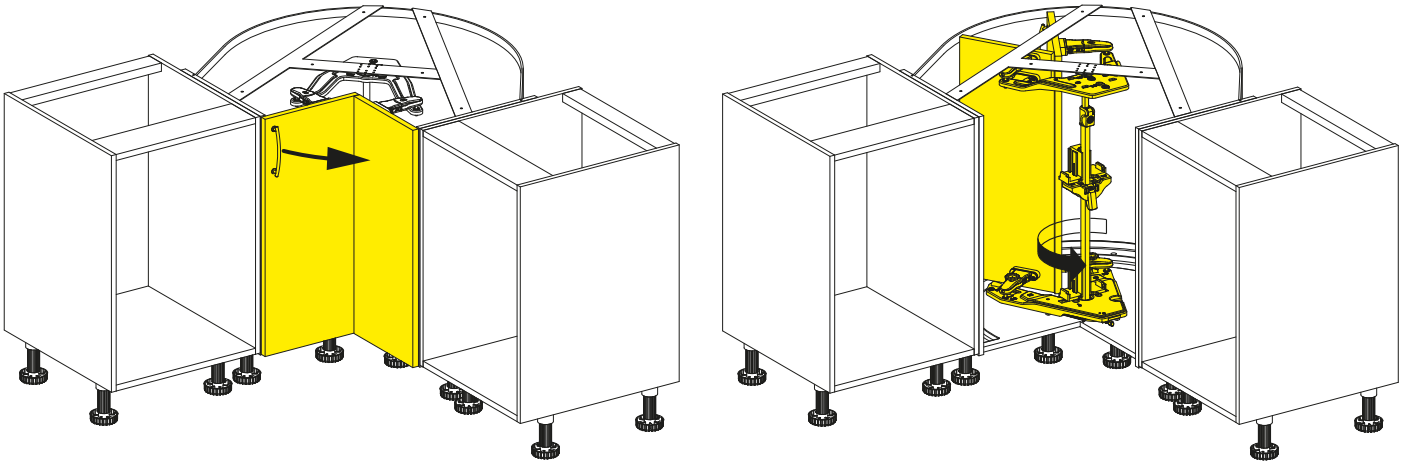


12

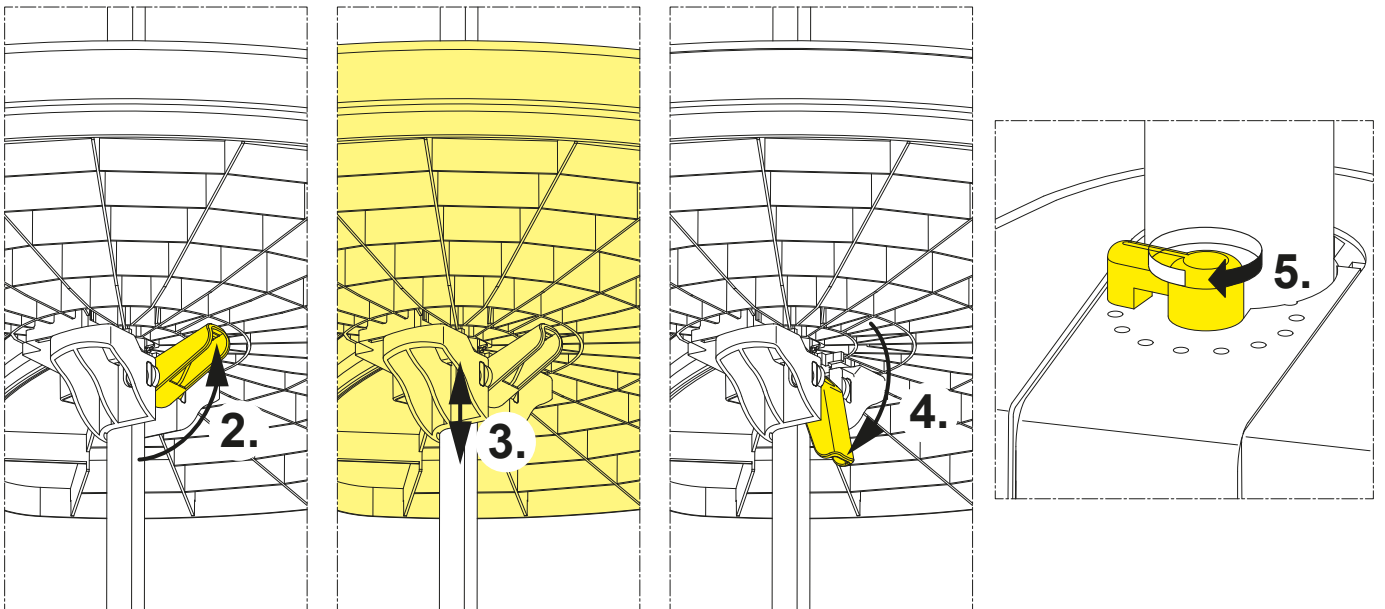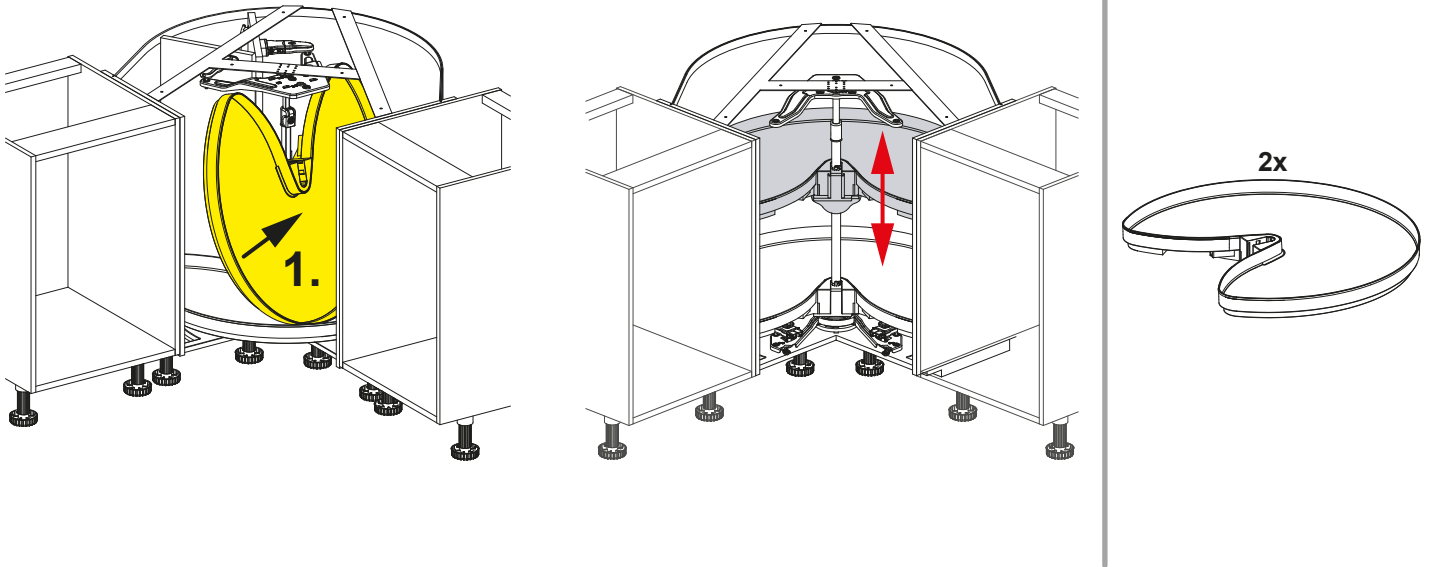

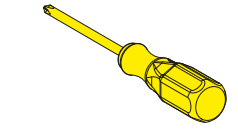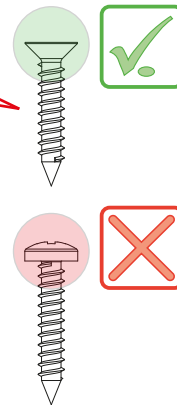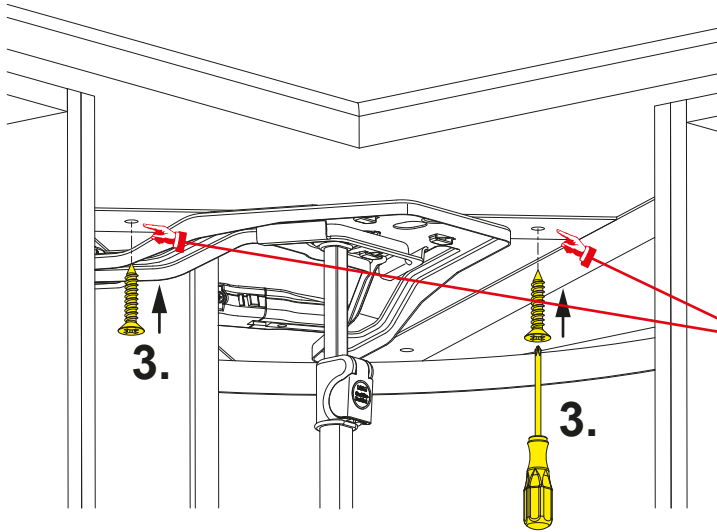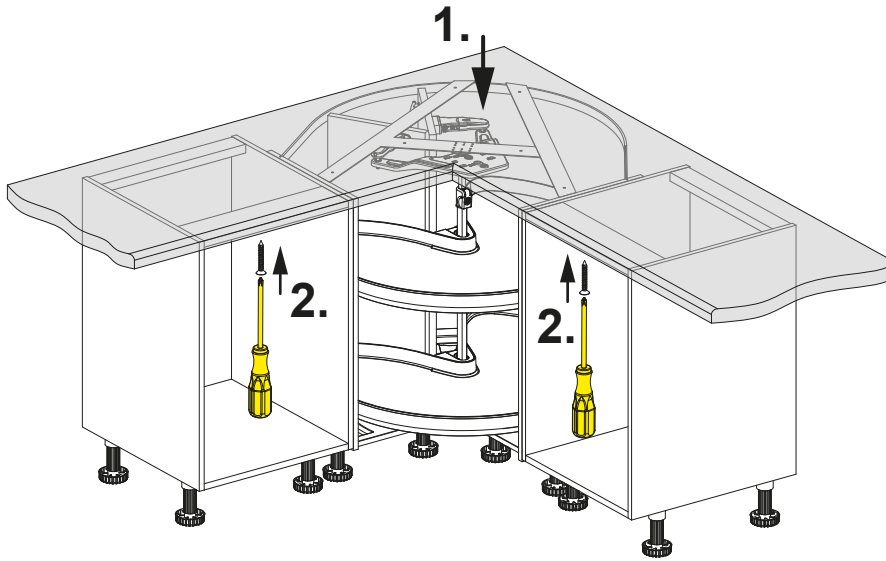

min. 2x
3,5 x

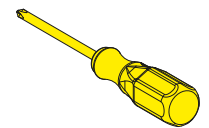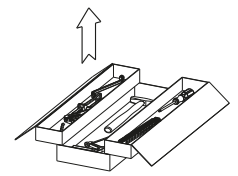

3,5 x

